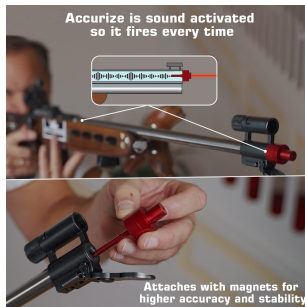

ACCURIZE

www.accurizetarget.com



Warning !
Avoid direct eye exposure
Laser light . Keep away from
children.

USER MANUAL
LASER ACOUSTIC MODEL

1. **Never look directly into the laser. Never point the laser to people or animals. The laser can cause eye damage.**
2. To power **ON** the laser point in a safe direction at a wall, ceiling or floor.
3. Hold the black button for about 1,5- 2 sec, the laser will flash once to indicate the unit is powered on. **(Not only tap the black button, but hold it for 1,5 - 2 sec)**
4. **Please Note:**
When fitting the **ACCURIZE Laser** to a firearm, ensure that the firearm is first clear of all live ammunition.
5. **Please Note:**
When fitting the **ACCURIZE Laser** to an Air Rifle/Pistol, ensure it is in an unpressurised dry fire state. When using the **ACCURIZE Laser** the Air Rifle/ Pistol must not at any stage be in the pressurised state.
6. To fit **ACCURIZE Laser** to your firearm insert the long narrow end into the bore, gently sliding the **ACCURIZE Laser** until the magnet holds the unit in place. It is suggested to lubricate the 'O' Ring with a small amount of gun oil.
7. The **ACCURIZE Laser** is now ready to be used, and will send laser shots down range. Note: The **ACCURIZE Laser** sensor is triggered by the sound of the firing pin. The **ACCURIZE Laser** sensor requires 0.6 Seconds to reset each time for the next shot. **NB:**
(see Below)
8. When drawing the **ACCURIZE Laser** from a holster it is recommended to further secure the **ACCURIZE Laser** into the bore with some electrical tape.
9. To power down the **ACCURIZE Laser**, point in a safe direct at a wall, ceiling or the floor, press and hold the small black button at the front of the **ACCURIZE Laser** for 5 to 6 seconds. The laser will flash 5 times to indicate the **ACCURIZE Laser** has powered down.
10. The **ACCURIZE Laser** should always be removed from the firearm after use. **DO NOT** forget to remove the **ACCURIZE Laser** before the firearm is used again with **LIVE** ammunition.

NB: Information: When using the Accurize Shooting System, if more ACCURIZE Laser
sensor delay is required when racking the slide or cycling the bolt, use the inhibit function in the app.

Replacing the Battery

Battery Mod. CR1620 can be purchased from your dealer and replaced by turning the laser top apart. Gently push the battery out by pressing a thin object on the back of the battery.

